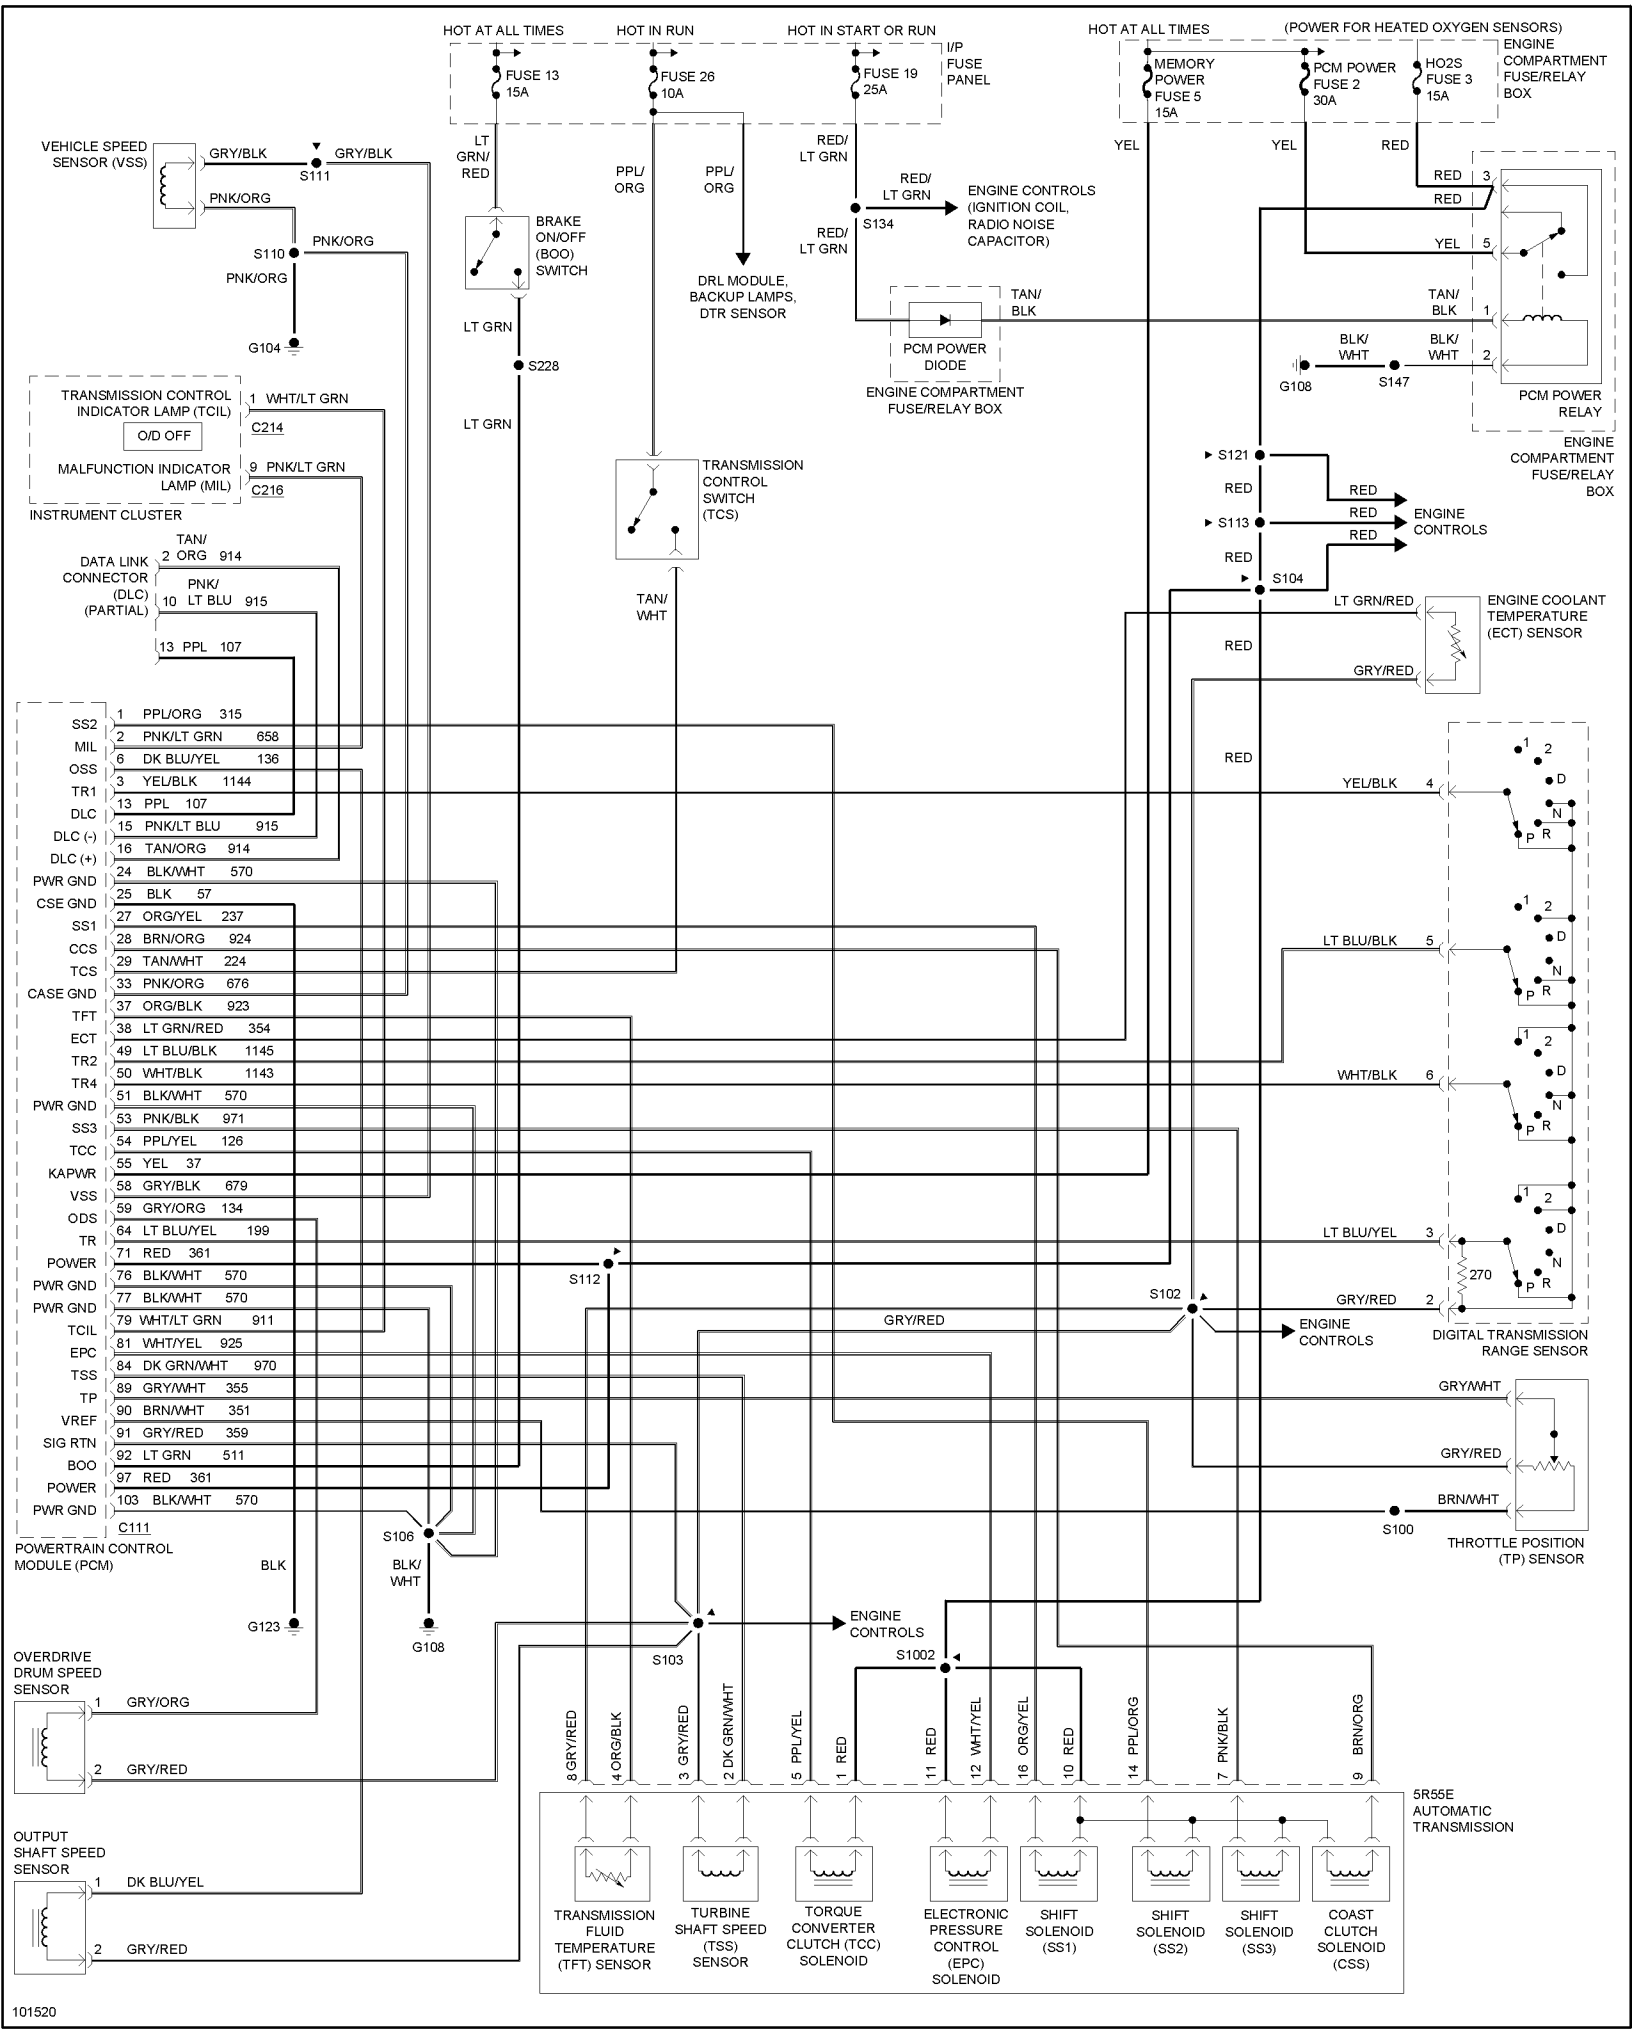
HOT AT ALL TIMES
HOT IN RUN
HOT IN START OR RUN
I/P FUSE PANEL
FUSE 13 15A
FUSE 26 10A
FUSE 19 25A
HOT AT ALL TIMES
(POWER FOR HEATED OXYGEN SENSORS)
ENGINE COMPARTMENT FUSE/RELAY BOX
MEMORY POWER FUSE 5 15A
PCM POWER FUSE 2 30A
HO2S FUSE 3 15A
VEHICLE SPEED SENSOR (VSS)
GRY/BLK
S111
PNK/ORG
S110
G104
BRAKE ON/OFF (BOO) SWITCH
LT GRN/RED
LT GRN
S228
PPL/ORG
DRL MODULE, BACKUP LAMPS, DTR SENSOR
RED/LT GRN
S134
ENGINE CONTROLS (IGNITION COIL, RADIO NOISE CAPACITOR)
PCM POWER DIODE
TAN/BLK
BLK/WHT
G108
S147
PCM POWER RELAY
TRANSMISSION CONTROL INDICATOR LAMP (TCIL)
O/D OFF
MALFUNCTION INDICATOR LAMP (MIL)
C214
C216
INSTRUMENT CLUSTER
TRANSMISSION CONTROL SWITCH (TCS)
TAN/WHT
S121
S113
S104
ENGINE CONTROLS
DATA LINK CONNECTOR (DLC) (PARTIAL)
TAN/ORG 914
PNK/LT BLU 915
PPL 107
LT GRN/RED
GRY/RED
ENGINE COOLANT TEMPERATURE (ECT) SENSOR
SS2
MIL
OSS
TR1
DLC
DLC (-)
DLC (+)
PWR GND
CSE GND
SS1
CCS
TCS
CASE GND
TFT
ECT
TR2
TR4
PWR GND
SS3
TCC
KAPWR
VSS
ODS
TR
POWER
PWR GND
PWR GND
TCIL
EPC
TSS
TP
VREF
SIG RTN
BOO
POWER
PWR GND
C111
POWERTRAIN CONTROL MODULE (PCM)
YEL/BLK 4
LT BLU/BLK 5
WHT/BLK 6
LT BLU/YEL 3
270
GRY/RED 2
DIGITAL TRANSMISSION RANGE SENSOR
S112
S102
GRY/WHT
BRN/WHT
S100
THROTTLE POSITION (TP) SENSOR
S106
BLK
BLK/WHT
G123
G108
S103
S1002
OVERDRIVE DRUM SPEED SENSOR
OUTPUT SHAFT SPEED SENSOR
DK BLU/YEL
8 GRY/RED
4 ORG/BLK
3 GRY/RED
2 DK GRN/WHT
5 PPL/YEL
1 RED
11 RED
12 WHT/YEL
16 ORG/YEL
10 RED
14 PPL/ORG
7 PNK/BLK
9 BRN/ORG
5R55E AUTOMATIC TRANSMISSION
TRANSMISSION FLUID TEMPERATURE (TFT) SENSOR
TURBINE SHAFT SPEED (TSS) SENSOR
TORQUE CONVERTER CLUTCH (TCC) SOLENOID
ELECTRONIC PRESSURE CONTROL (EPC) SOLENOID
SHIFT SOLENOID (SS1)
SHIFT SOLENOID (SS2)
SHIFT SOLENOID (SS3)
COAST CLUTCH SOLENOID (CSS)
101520