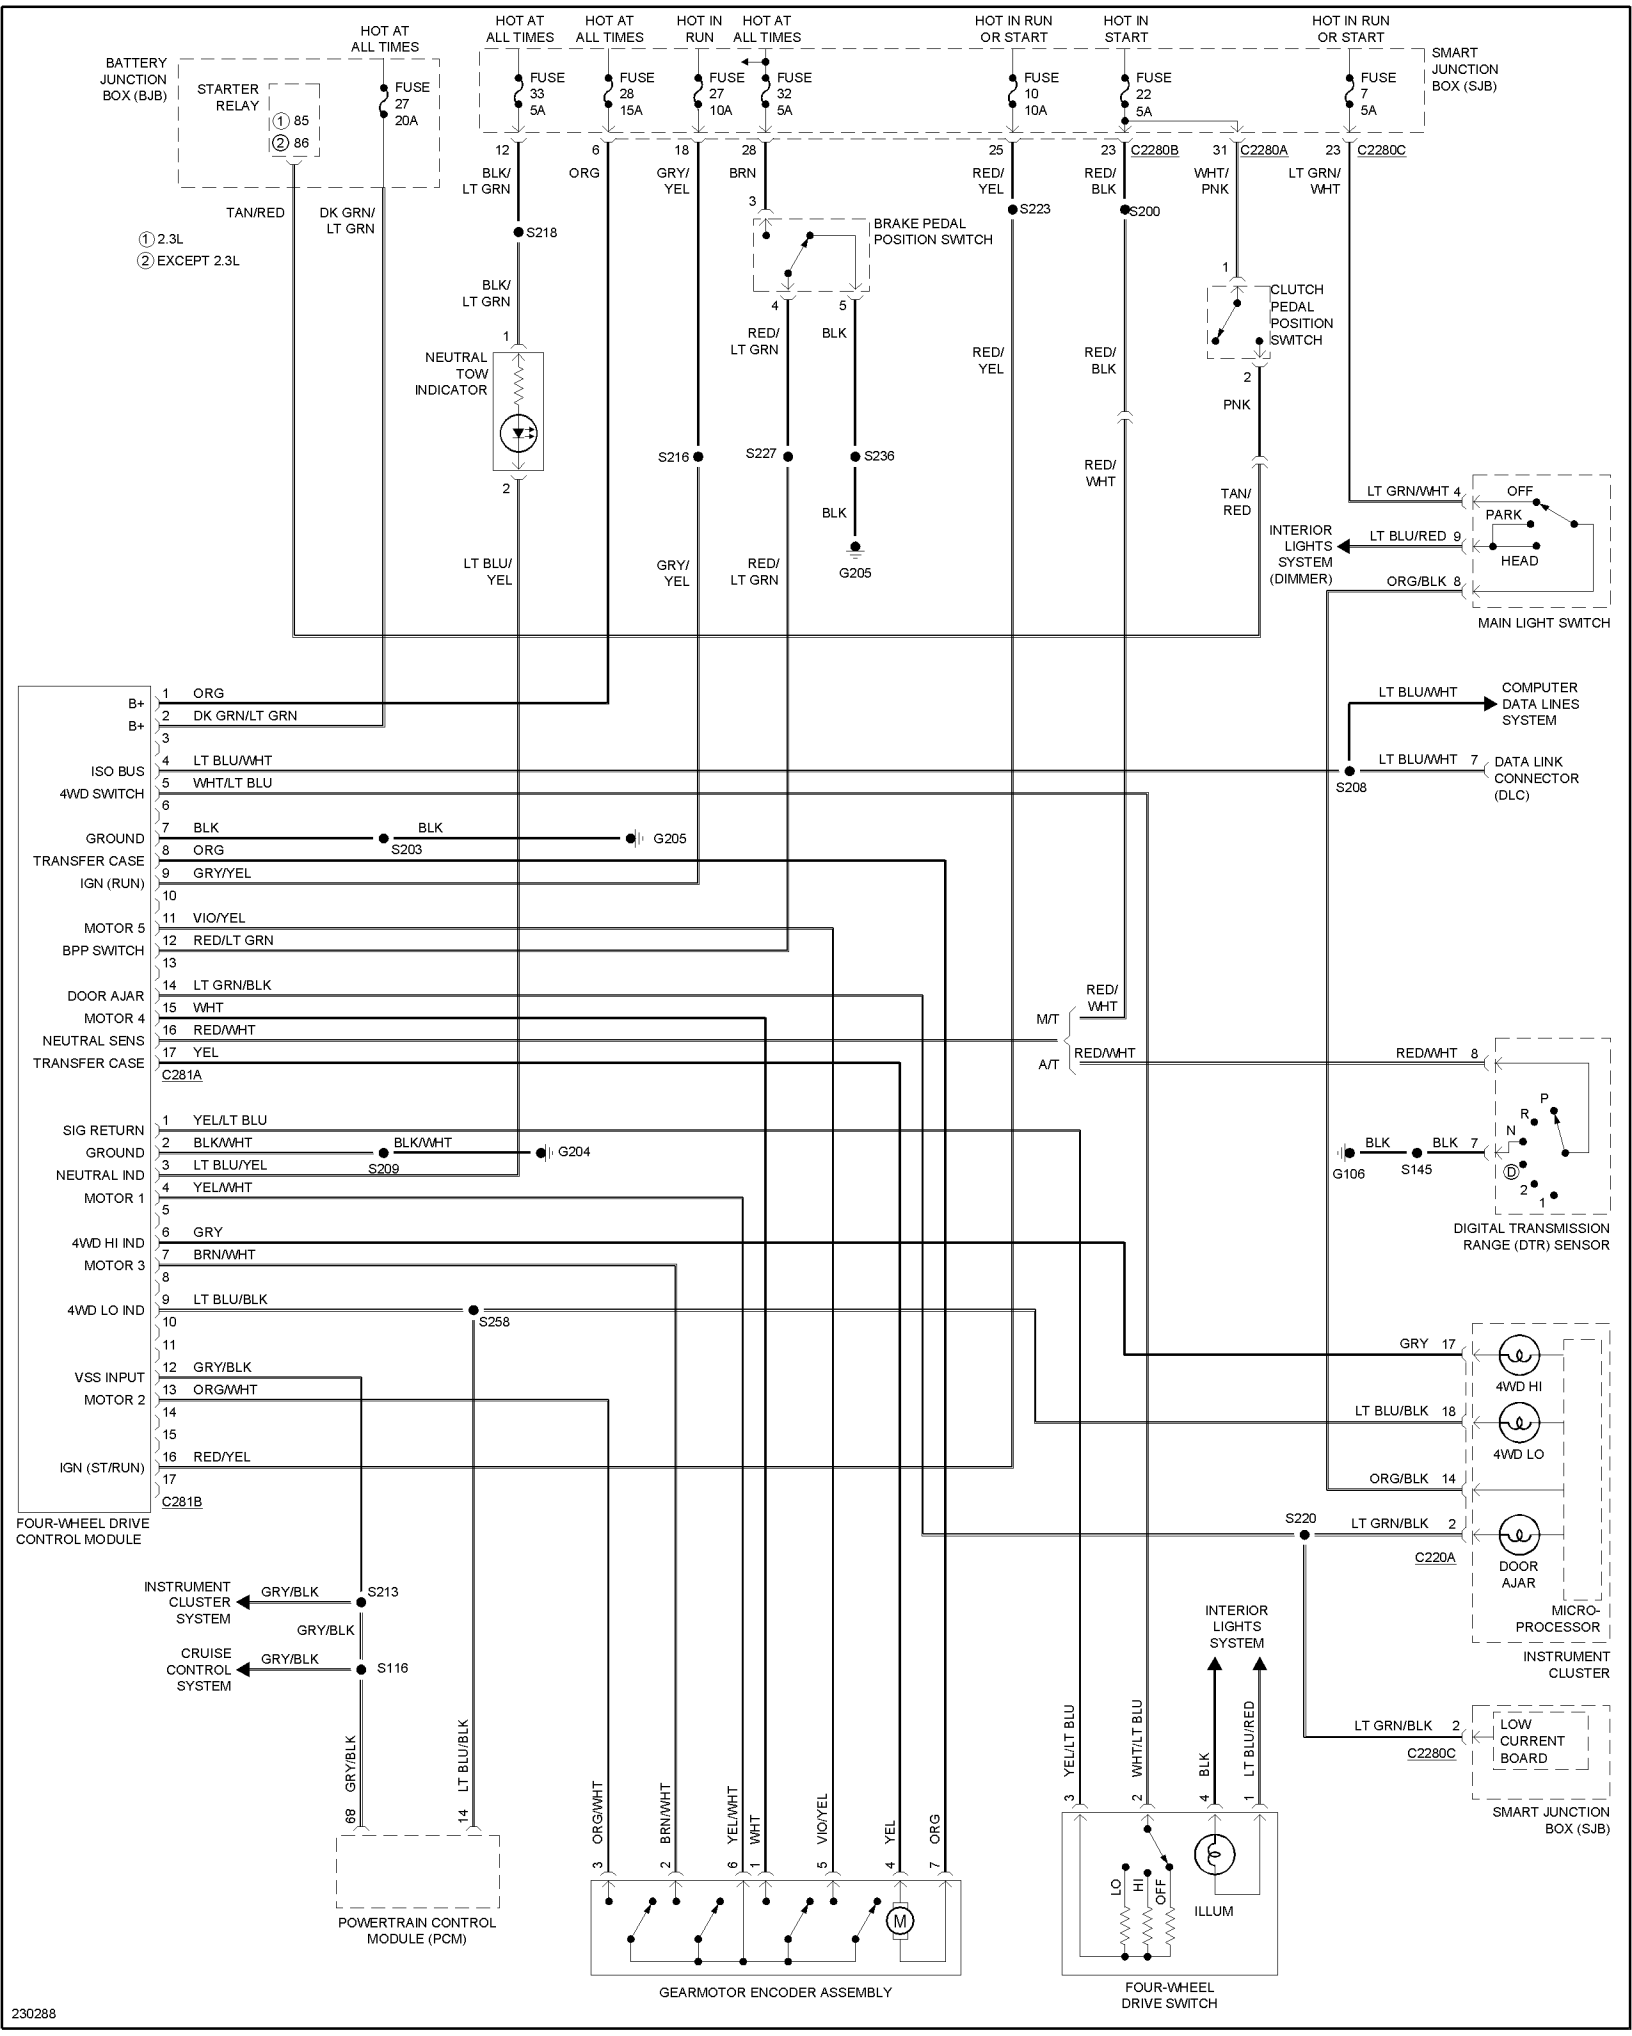
BATTERY JUNCTION BOX (BJB)
STARTER RELAY
85
86
HOT AT ALL TIMES
FUSE 27 20A
TAN/RED
DK GRN/LT GRN
2.3L
EXCEPT 2.3L
HOT AT ALL TIMES
HOT AT ALL TIMES
HOT IN RUN
HOT AT ALL TIMES
HOT IN RUN OR START
HOT IN START
HOT IN RUN OR START
SMART JUNCTION BOX (SJB)
FUSE 33 5A
FUSE 28 15A
FUSE 27 10A
FUSE 32 5A
FUSE 10 10A
FUSE 22 5A
FUSE 7 5A
12 BLK/LT GRN
6 ORG
18 GRY/YEL
28 BRN
25 RED/YEL
23 RED/BLK
C2280B
31 WHT/PNK
C2280A
23 LT GRN/WHT
C2280C
S218
S223
S200
BRAKE PEDAL POSITION SWITCH
CLUTCH PEDAL POSITION SWITCH
NEUTRAL TOW INDICATOR
BLK/LT GRN
RED/LT GRN
BLK
RED/YEL
RED/BLK
PNK
RED/WHT
TAN/RED
S216
S227
S236
G205
LT BLU/YEL
GRY/YEL
RED/LT GRN
BLK
LT GRN/WHT 4
OFF
PARK
HEAD
LT BLU/RED 9
INTERIOR LIGHTS SYSTEM (DIMMER)
ORG/BLK 8
MAIN LIGHT SWITCH
B+ 1 ORG
B+ 2 DK GRN/LT GRN
3
ISO BUS 4 LT BLU/WHT
4WD SWITCH 5 WHT/LT BLU
6
GROUND 7 BLK
TRANSFER CASE 8 ORG
IGN (RUN) 9 GRY/YEL
10
MOTOR 5 11 VIO/YEL
BPP SWITCH 12 RED/LT GRN
13
DOOR AJAR 14 LT GRN/BLK
MOTOR 4 15 WHT
NEUTRAL SENS 16 RED/WHT
TRANSFER CASE 17 YEL
C281A
BLK
S203
G205
LT BLU/WHT
COMPUTER DATA LINES SYSTEM
LT BLU/WHT 7
DATA LINK CONNECTOR (DLC)
S208
M/T
A/T
RED/WHT
RED/WHT 8
SIG RETURN 1 YEL/LT BLU
GROUND 2 BLK/WHT
NEUTRAL IND 3 LT BLU/YEL
MOTOR 1 4 YEL/WHT
5
4WD HI IND 6 GRY
MOTOR 3 7 BRN/WHT
8
4WD LO IND 9 LT BLU/BLK
10
11
VSS INPUT 12 GRY/BLK
MOTOR 2 13 ORG/WHT
14
15
IGN (ST/RUN) 16 RED/YEL
17
C281B
BLK/WHT
S209
G204
S258
P
R
N
D
2
1
BLK
S145
G106
BLK 7
DIGITAL TRANSMISSION RANGE (DTR) SENSOR
FOUR-WHEEL DRIVE CONTROL MODULE
GRY 17
4WD HI
LT BLU/BLK 18
4WD LO
ORG/BLK 14
S220
LT GRN/BLK 2
C220A
DOOR AJAR
MICRO-PROCESSOR
INSTRUMENT CLUSTER
INSTRUMENT CLUSTER SYSTEM
GRY/BLK
S213
CRUISE CONTROL SYSTEM
S116
68 GRY/BLK
14 LT BLU/BLK
POWERTRAIN CONTROL MODULE (PCM)
3 ORG/WHT
2 BRN/WHT
6 YEL/WHT
1 WHT
5 VIO/YEL
4 YEL
7 ORG
M
GEARMOTOR ENCODER ASSEMBLY
INTERIOR LIGHTS SYSTEM
3 YEL/LT BLU
2 WHT/LT BLU
4 BLK
1 LT BLU/RED
LO
HI
OFF
ILLUM
FOUR-WHEEL DRIVE SWITCH
LT GRN/BLK 2
C2280C
LOW CURRENT BOARD
SMART JUNCTION BOX (SJB)
230288