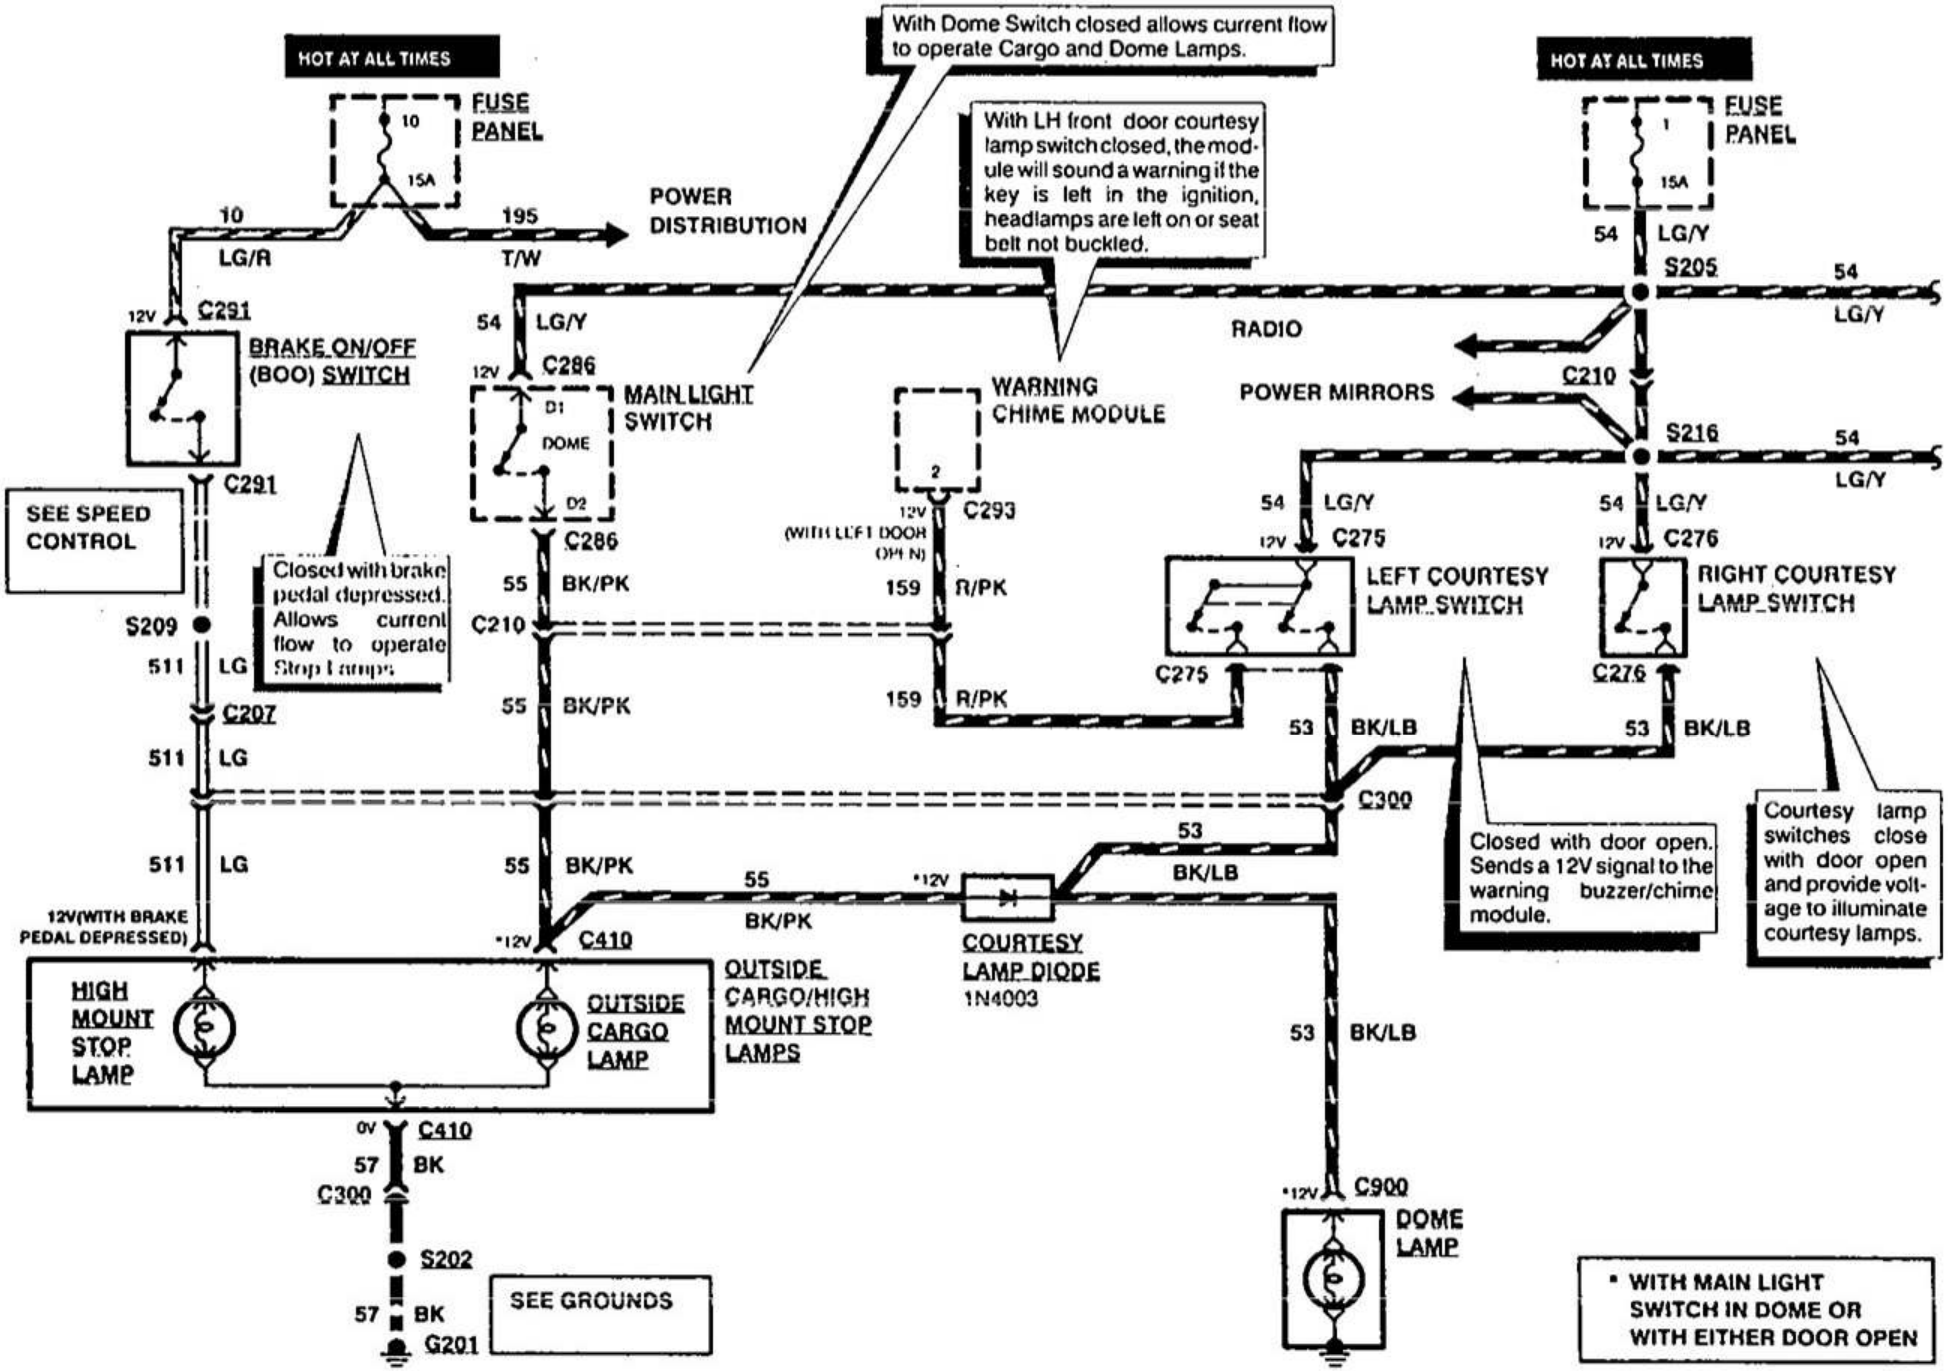
HOT AT ALL TIMES
FUSE PANEL
10
15A
10
LG/R
195
T/W
POWER DISTRIBUTION
With Dome Switch closed allows current flow to operate Cargo and Dome Lamps.
With LH front door courtesy lamp switch closed, the module will sound a warning if the key is left in the ignition, headlamps are left on or seat belt not buckled.
HOT AT ALL TIMES
FUSE PANEL
1
15A
54
LG/Y
S205
54
LG/Y
12V
C291
BRAKE ON/OFF (BOO) SWITCH
54
LG/Y
12V
C286
MAIN LIGHT SWITCH
D1
DOME
D2
RADIO
POWER MIRRORS
C210
WARNING CHIME MODULE
2
12V
C293
(WITH LEFT DOOR OPEN)
S216
54
LG/Y
C291
SEE SPEED CONTROL
Closed with brake pedal depressed. Allows current flow to operate Stop Lamps
C286
55
BK/PK
159
R/PK
54
LG/Y
12V
C275
LEFT COURTESY LAMP SWITCH
54
LG/Y
12V
C276
RIGHT COURTESY LAMP SWITCH
S209
511
LG
C210
C275
C276
C207
55
BK/PK
159
R/PK
53
BK/LB
53
BK/LB
511
LG
C300
53
BK/LB
Closed with door open. Sends a 12V signal to the warning buzzer/chime module.
Courtesy lamp switches close with door open and provide voltage to illuminate courtesy lamps.
511
LG
55
BK/PK
55
BK/PK
*12V
12V(WITH BRAKE PEDAL DEPRESSED)
*12V
C410
COURTESY LAMP DIODE
1N4003
HIGH MOUNT STOP LAMP
OUTSIDE CARGO LAMP
OUTSIDE CARGO/HIGH MOUNT STOP LAMPS
53
BK/LB
0V
C410
57
BK
C300
*12V
C900
DOME LAMP
S202
57
BK
G201
SEE GROUNDS
* WITH MAIN LIGHT SWITCH IN DOME OR WITH EITHER DOOR OPEN