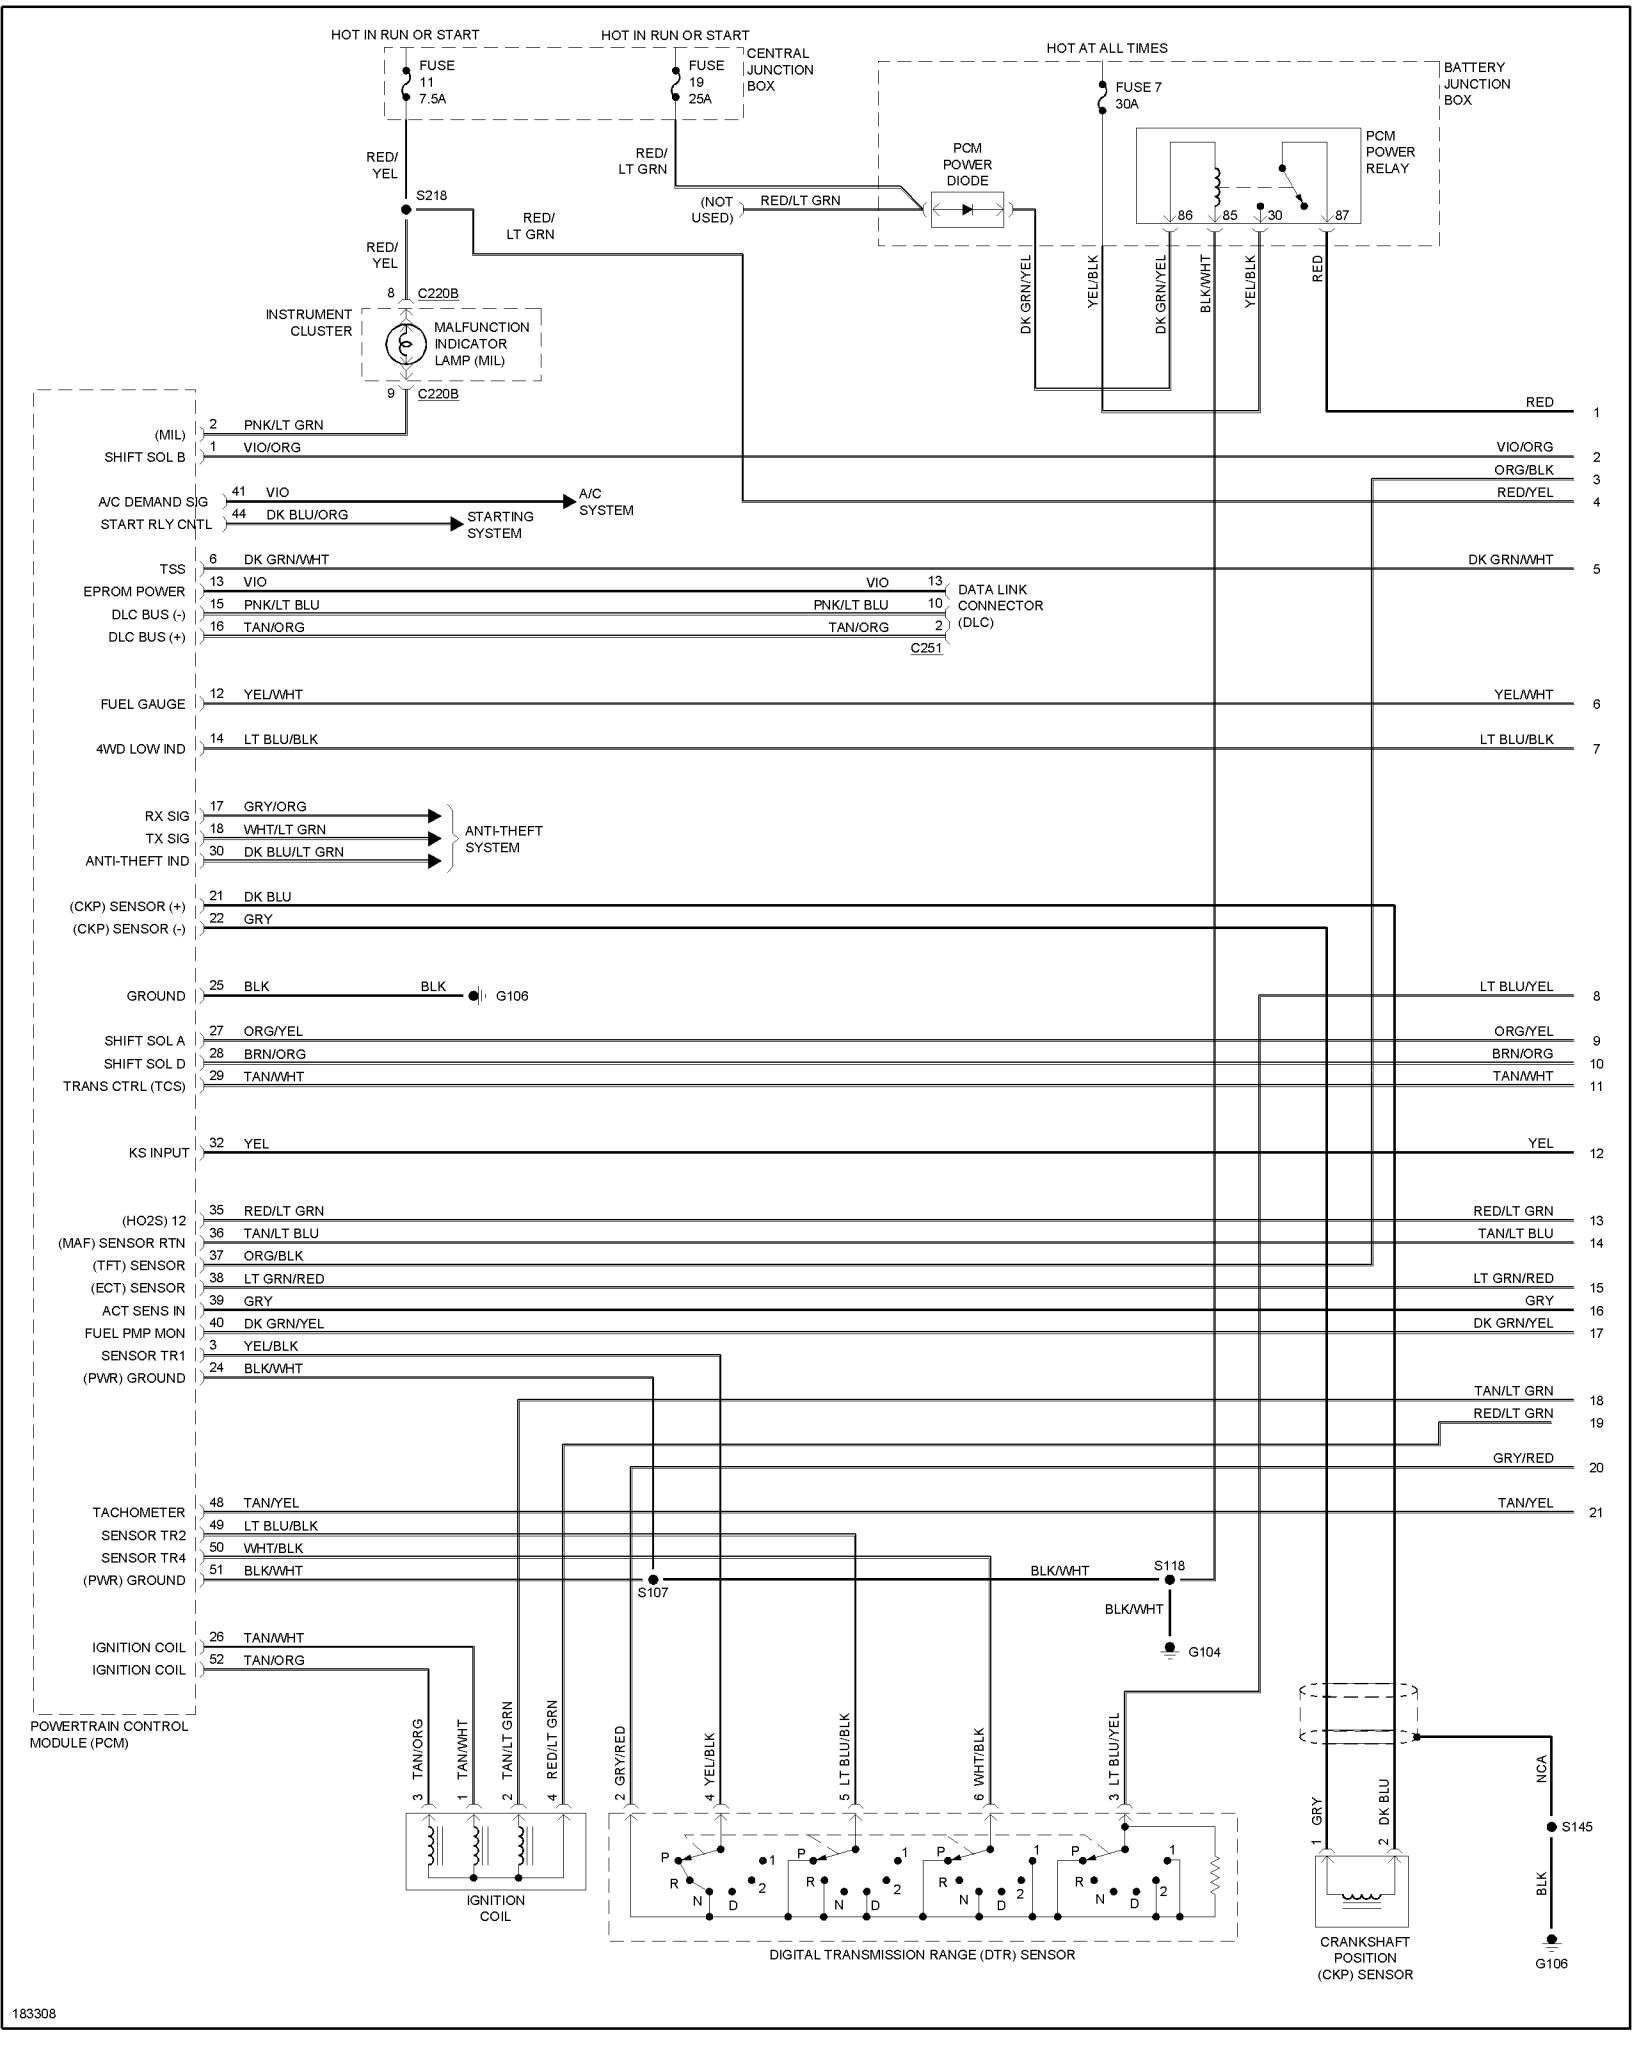
HOT IN RUN OR START
HOT IN RUN OR START
FUSE 11 7.5A
FUSE 19 25A
CENTRAL JUNCTION BOX
HOT AT ALL TIMES
FUSE 7 30A
BATTERY JUNCTION BOX
PCM POWER RELAY
PCM POWER DIODE
RED/ YEL
RED/ LT GRN
S218
(NOT USED)
RED/LT GRN
86
85
30
87
DK GRN/YEL
YEL/BLK
DK GRN/YEL
BLK/WHT
YEL/BLK
RED
8
C220B
INSTRUMENT CLUSTER
MALFUNCTION INDICATOR LAMP (MIL)
9
C220B
(MIL)
2 PNK/LT GRN
SHIFT SOL B
1 VIO/ORG
A/C DEMAND SIG
41 VIO
A/C SYSTEM
START RLY CNTL
44 DK BLU/ORG
STARTING SYSTEM
TSS
6 DK GRN/WHT
EPROM POWER
13 VIO
DLC BUS (-)
15 PNK/LT BLU
DLC BUS (+)
16 TAN/ORG
VIO 13
PNK/LT BLU 10
TAN/ORG 2
DATA LINK CONNECTOR (DLC)
C251
FUEL GAUGE
12 YEL/WHT
4WD LOW IND
14 LT BLU/BLK
RX SIG
17 GRY/ORG
TX SIG
18 WHT/LT GRN
ANTI-THEFT IND
30 DK BLU/LT GRN
ANTI-THEFT SYSTEM
(CKP) SENSOR (+)
21 DK BLU
(CKP) SENSOR (-)
22 GRY
GROUND
25 BLK
BLK
G106
SHIFT SOL A
27 ORG/YEL
SHIFT SOL D
28 BRN/ORG
TRANS CTRL (TCS)
29 TAN/WHT
KS INPUT
32 YEL
(HO2S) 12
35 RED/LT GRN
(MAF) SENSOR RTN
36 TAN/LT BLU
(TFT) SENSOR
37 ORG/BLK
(ECT) SENSOR
38 LT GRN/RED
ACT SENS IN
39 GRY
FUEL PMP MON
40 DK GRN/YEL
SENSOR TR1
3 YEL/BLK
(PWR) GROUND
24 BLK/WHT
TACHOMETER
48 TAN/YEL
SENSOR TR2
49 LT BLU/BLK
SENSOR TR4
50 WHT/BLK
(PWR) GROUND
51 BLK/WHT
S107
BLK/WHT
S118
BLK/WHT
G104
IGNITION COIL
26 TAN/WHT
IGNITION COIL
52 TAN/ORG
POWERTRAIN CONTROL MODULE (PCM)
RED 1
VIO/ORG 2
ORG/BLK 3
RED/YEL 4
DK GRN/WHT 5
YEL/WHT 6
LT BLU/BLK 7
LT BLU/YEL 8
ORG/YEL 9
BRN/ORG 10
TAN/WHT 11
YEL 12
RED/LT GRN 13
TAN/LT BLU 14
LT GRN/RED 15
GRY 16
DK GRN/YEL 17
TAN/LT GRN 18
RED/LT GRN 19
GRY/RED 20
TAN/YEL 21
3 TAN/ORG
1 TAN/WHT
2 TAN/LT GRN
4 RED/LT GRN
IGNITION COIL
2 GRY/RED
4 YEL/BLK
5 LT BLU/BLK
6 WHT/BLK
3 LT BLU/YEL
P
R
N
D
1
2
DIGITAL TRANSMISSION RANGE (DTR) SENSOR
1 GRY
2 DK BLU
CRANKSHAFT POSITION (CKP) SENSOR
NCA
S145
BLK
G106
183308