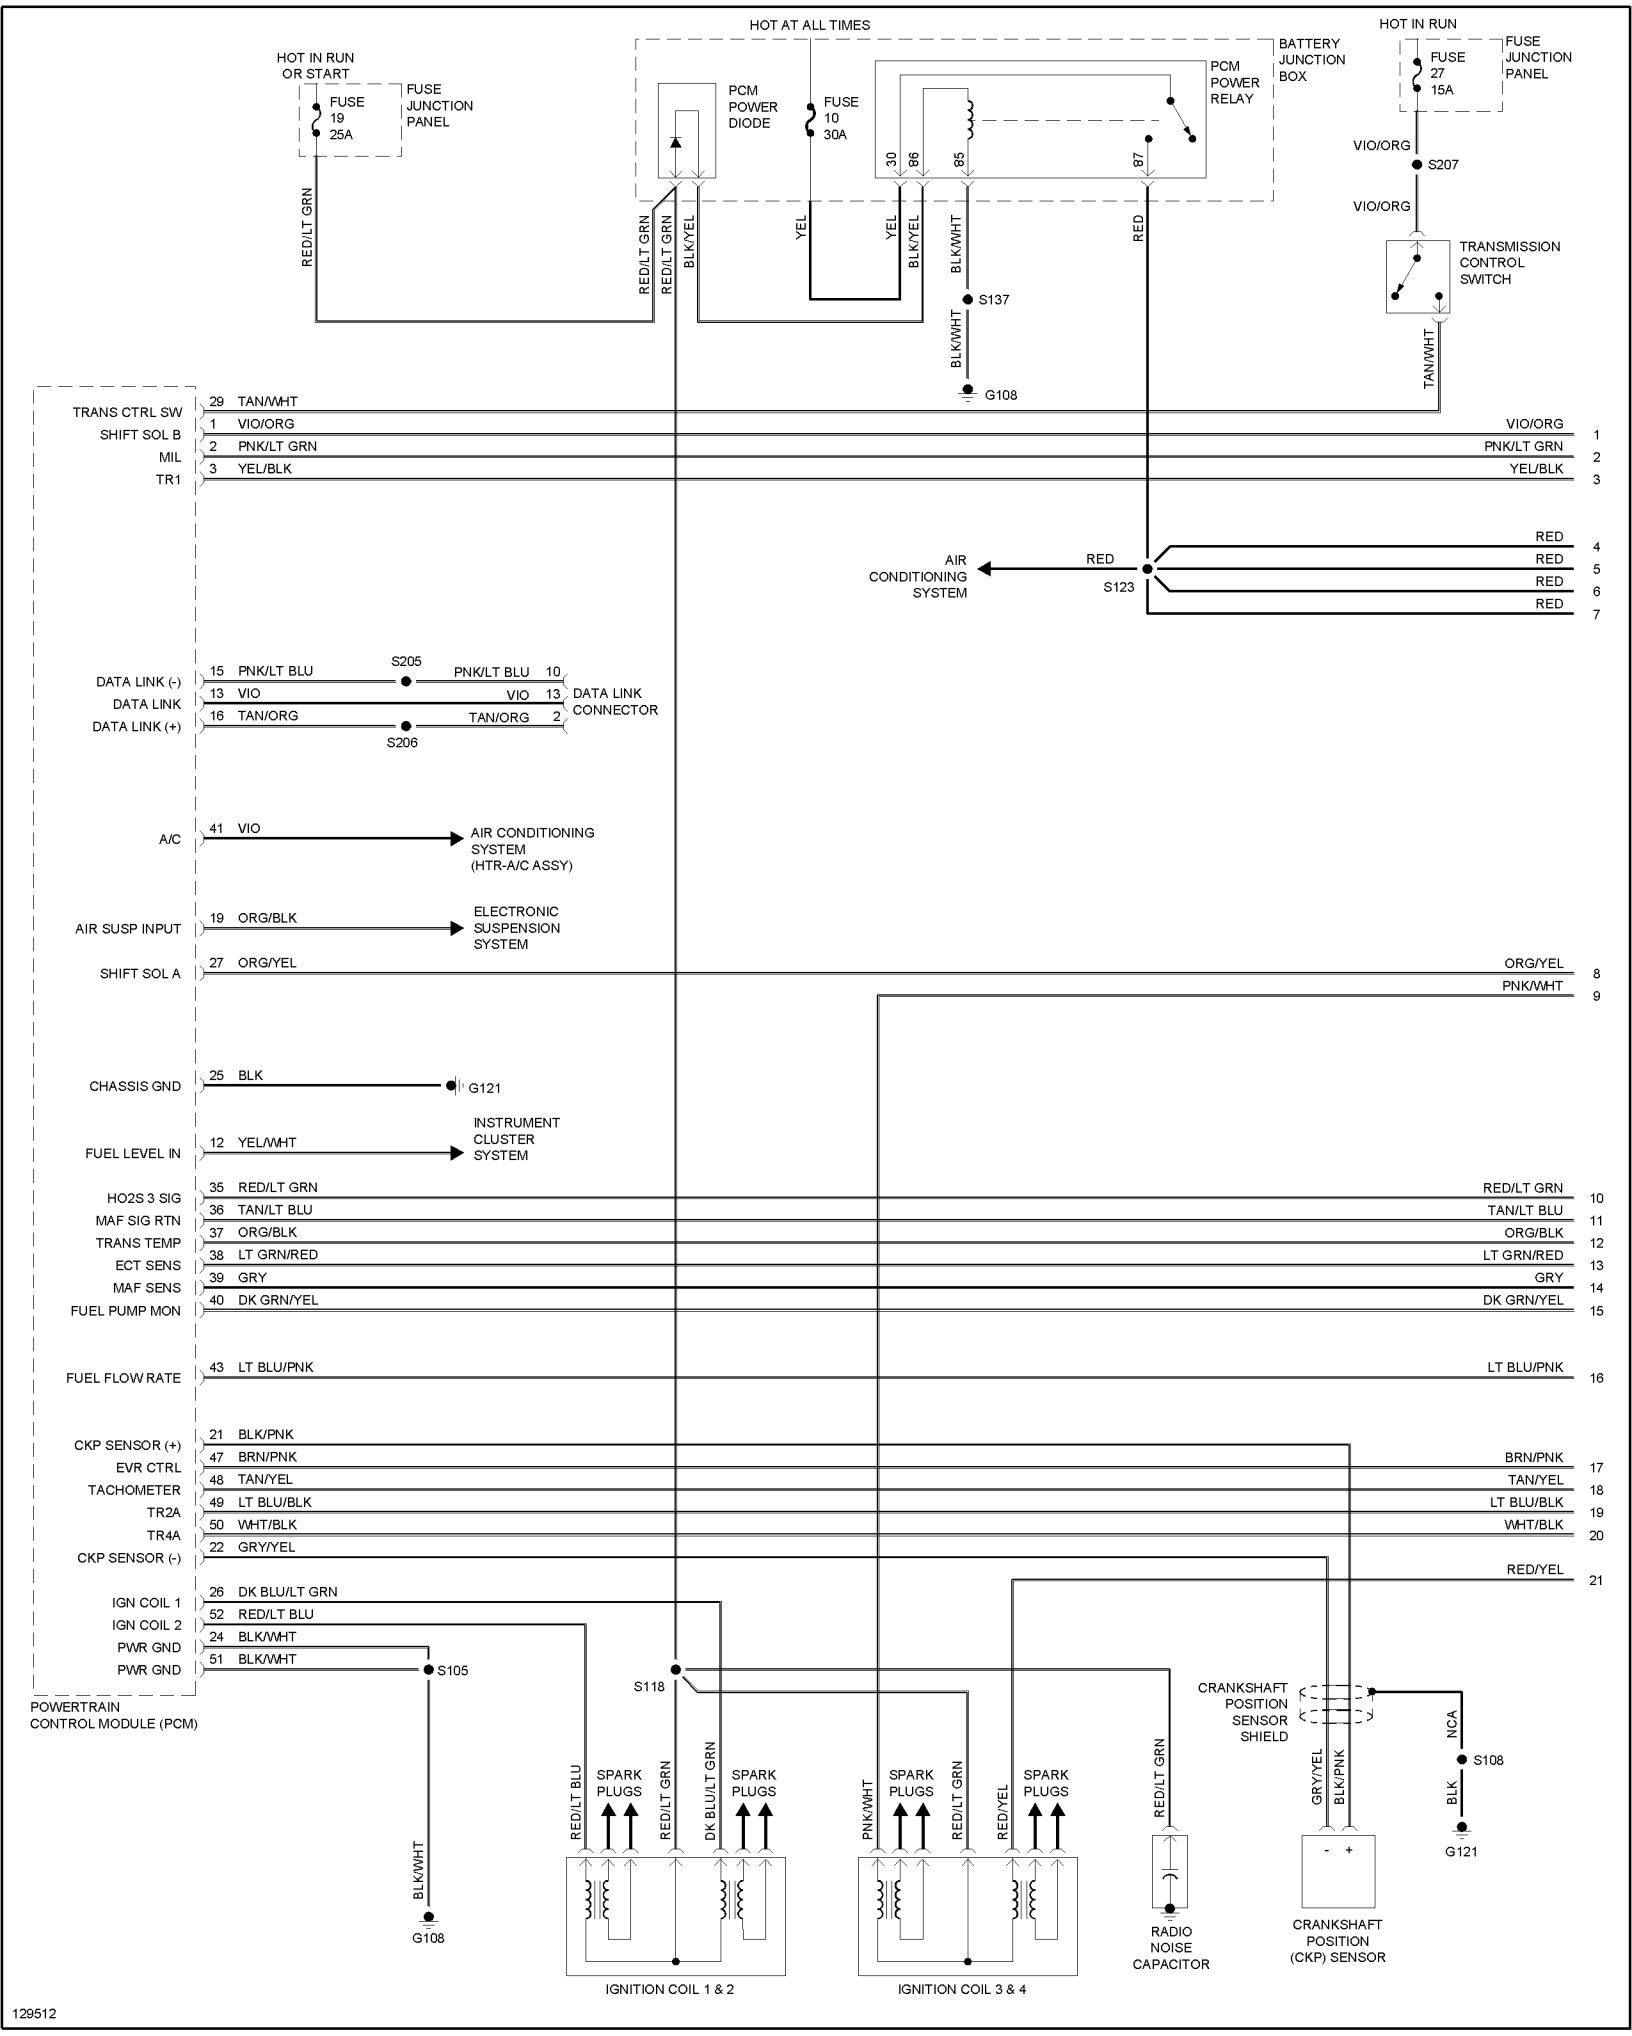
HOT IN RUN OR START
FUSE 19 25A
FUSE JUNCTION PANEL
HOT AT ALL TIMES
PCM POWER DIODE
FUSE 10 30A
PCM POWER RELAY
BATTERY JUNCTION BOX
HOT IN RUN
FUSE 27 15A
FUSE JUNCTION PANEL
VIO/ORG
S207
TRANSMISSION CONTROL SWITCH
TAN/WHT
RED/LT GRN
YEL
BLK/YEL
BLK/WHT
RED
S137
G108
TRANS CTRL SW 29 TAN/WHT
SHIFT SOL B 1 VIO/ORG
MIL 2 PNK/LT GRN
TR1 3 YEL/BLK
AIR CONDITIONING SYSTEM
S123
DATA LINK (-) 15 PNK/LT BLU
DATA LINK 13 VIO
DATA LINK (+) 16 TAN/ORG
S205
S206
DATA LINK CONNECTOR
A/C 41 VIO
AIR CONDITIONING SYSTEM (HTR-A/C ASSY)
AIR SUSP INPUT 19 ORG/BLK
ELECTRONIC SUSPENSION SYSTEM
SHIFT SOL A 27 ORG/YEL
PNK/WHT
CHASSIS GND 25 BLK
G121
FUEL LEVEL IN 12 YEL/WHT
INSTRUMENT CLUSTER SYSTEM
HO2S 3 SIG 35 RED/LT GRN
MAF SIG RTN 36 TAN/LT BLU
TRANS TEMP 37 ORG/BLK
ECT SENS 38 LT GRN/RED
MAF SENS 39 GRY
FUEL PUMP MON 40 DK GRN/YEL
FUEL FLOW RATE 43 LT BLU/PNK
CKP SENSOR (+) 21 BLK/PNK
EVR CTRL 47 BRN/PNK
TACHOMETER 48 TAN/YEL
TR2A 49 LT BLU/BLK
TR4A 50 WHT/BLK
CKP SENSOR (-) 22 GRY/YEL
RED/YEL
IGN COIL 1 26 DK BLU/LT GRN
IGN COIL 2 52 RED/LT BLU
PWR GND 24 BLK/WHT
PWR GND 51 BLK/WHT
S105
S118
POWERTRAIN CONTROL MODULE (PCM)
CRANKSHAFT POSITION SENSOR SHIELD
NCA
S108
BLK
G121
GRY/YEL
BLK/PNK
RED/LT BLU
SPARK PLUGS
RED/LT GRN
DK BLU/LT GRN
PNK/WHT
RED/YEL
BLK/WHT
G108
RADIO NOISE CAPACITOR
CRANKSHAFT POSITION (CKP) SENSOR
IGNITION COIL 1 & 2
IGNITION COIL 3 & 4
129512