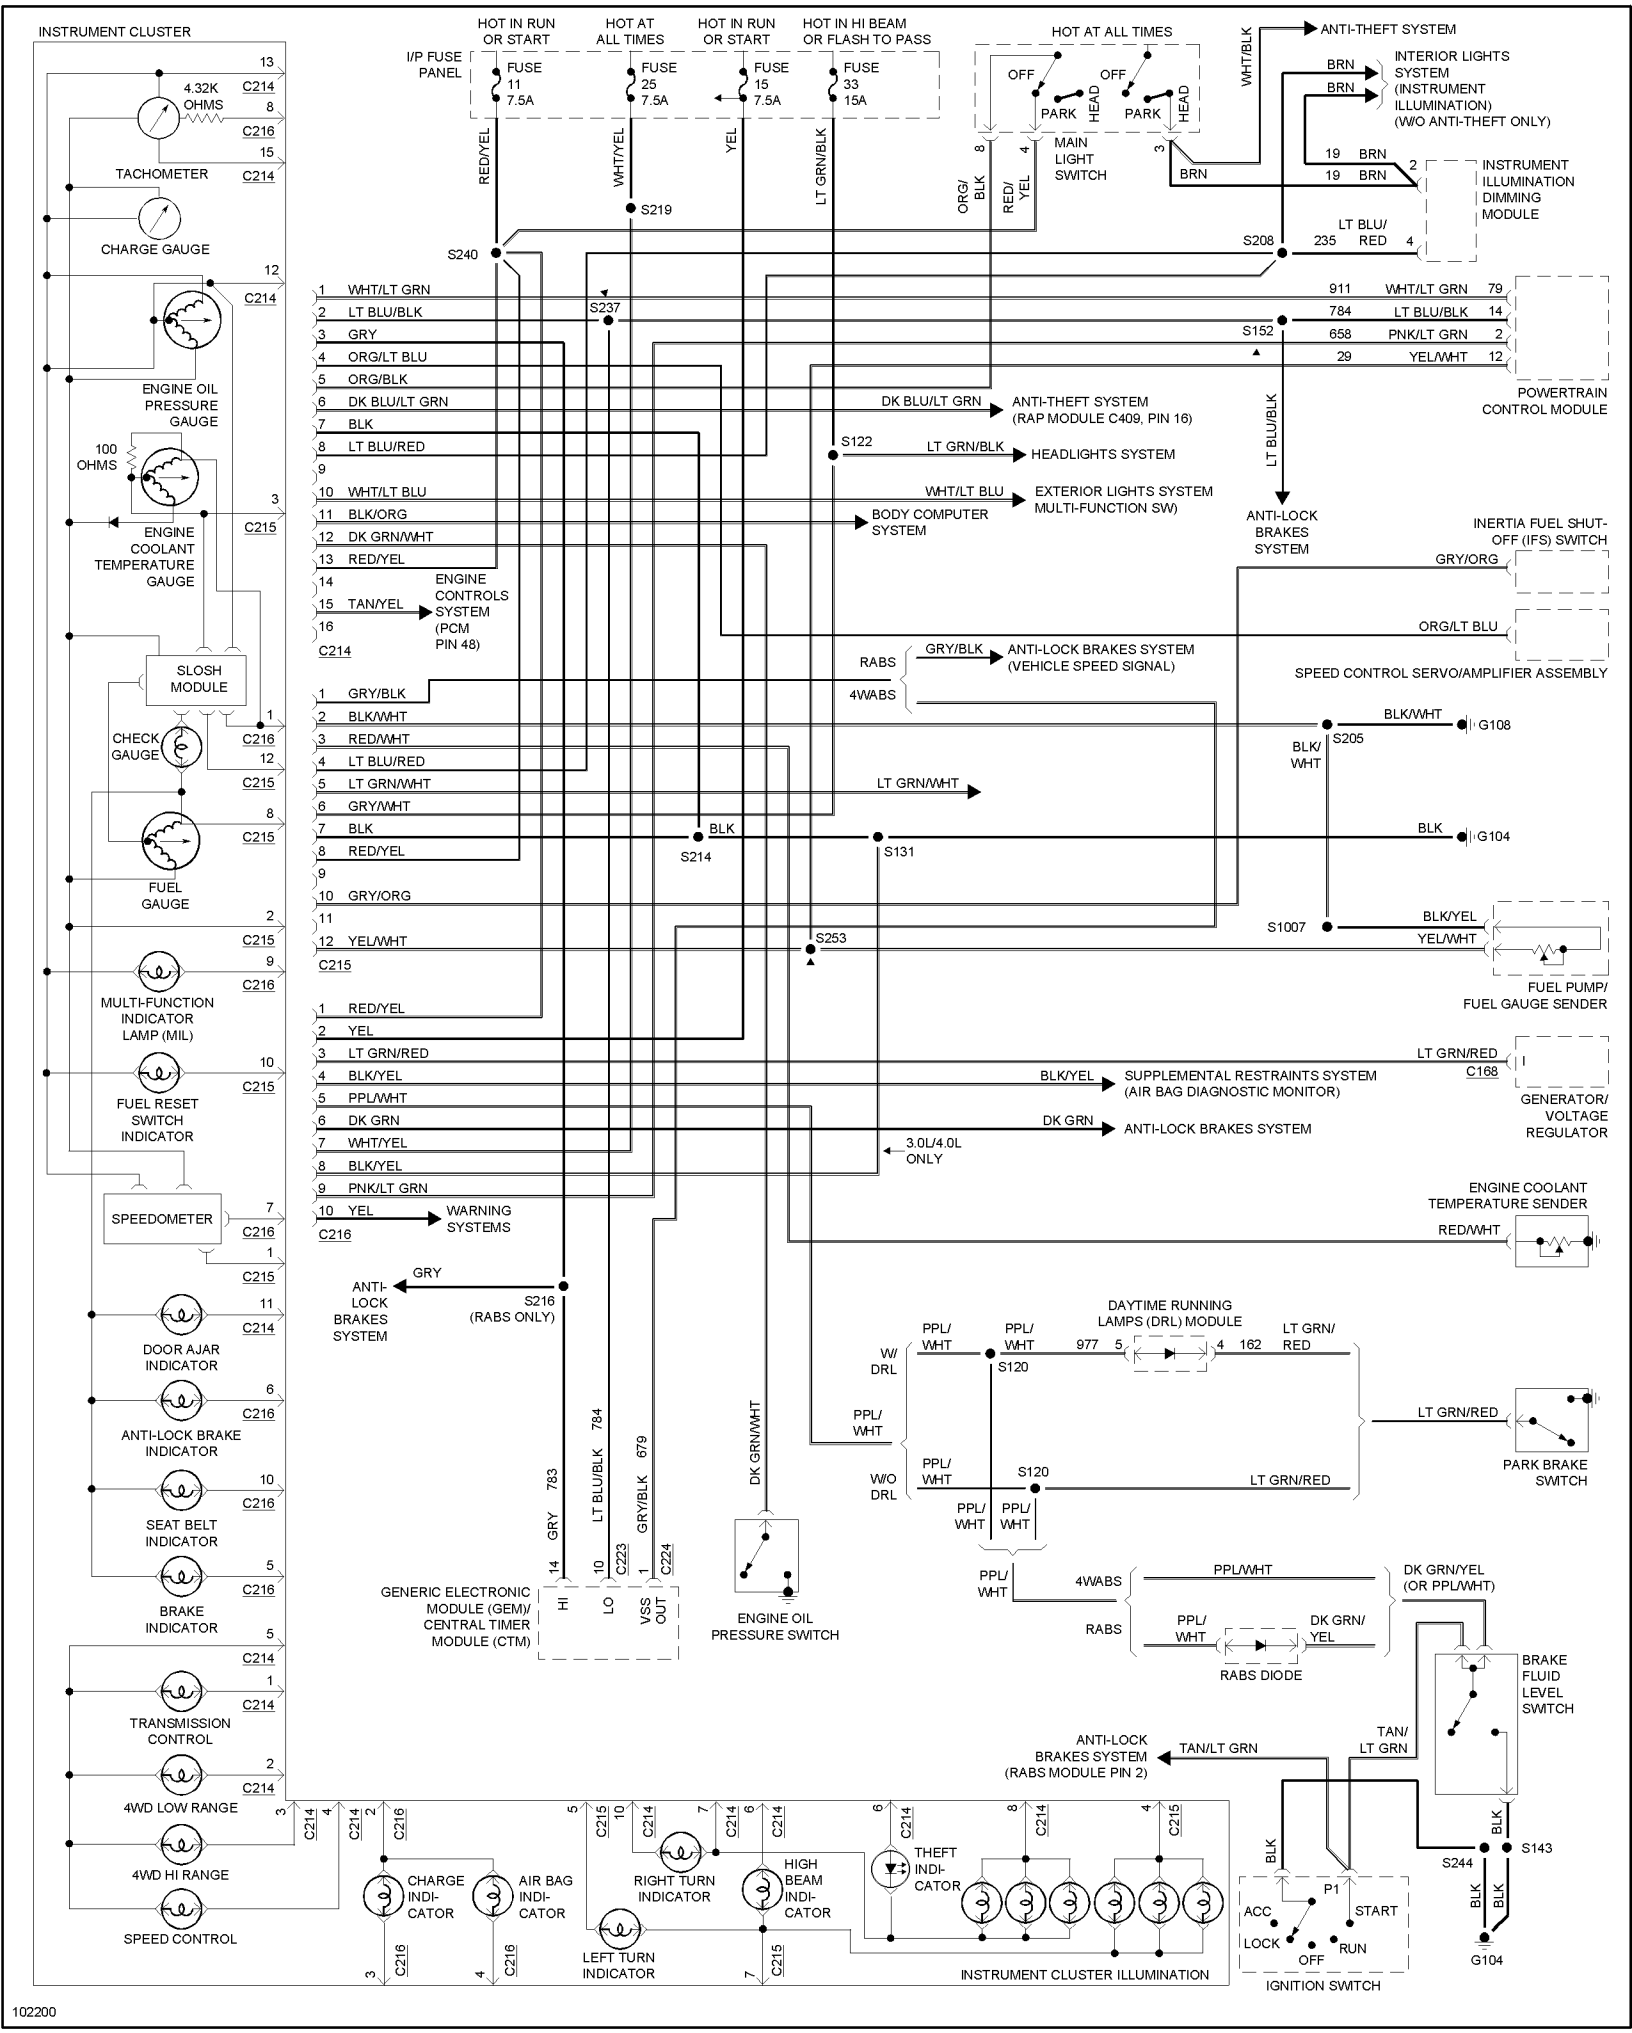
INSTRUMENT CLUSTER
TACHOMETER
4.32K OHMS
CHARGE GAUGE
ENGINE OIL PRESSURE GAUGE
100 OHMS
ENGINE COOLANT TEMPERATURE GAUGE
SLOSH MODULE
CHECK GAUGE
FUEL GAUGE
MULTI-FUNCTION INDICATOR LAMP (MIL)
FUEL RESET SWITCH INDICATOR
SPEEDOMETER
DOOR AJAR INDICATOR
ANTI-LOCK BRAKE INDICATOR
SEAT BELT INDICATOR
BRAKE INDICATOR
TRANSMISSION CONTROL
4WD LOW RANGE
4WD HI RANGE
SPEED CONTROL
HOT IN RUN OR START
HOT AT ALL TIMES
HOT IN RUN OR START
HOT IN HI BEAM OR FLASH TO PASS
I/P FUSE PANEL
FUSE 11 7.5A
FUSE 25 7.5A
FUSE 15 7.5A
FUSE 33 15A
HOT AT ALL TIMES
OFF
PARK
HEAD
MAIN LIGHT SWITCH
ANTI-THEFT SYSTEM
INTERIOR LIGHTS SYSTEM (INSTRUMENT ILLUMINATION) (W/O ANTI-THEFT ONLY)
INSTRUMENT ILLUMINATION DIMMING MODULE
POWERTRAIN CONTROL MODULE
ANTI-THEFT SYSTEM (RAP MODULE C409, PIN 16)
HEADLIGHTS SYSTEM
EXTERIOR LIGHTS SYSTEM MULTI-FUNCTION SW)
BODY COMPUTER SYSTEM
ANTI-LOCK BRAKES SYSTEM
ENGINE CONTROLS SYSTEM (PCM PIN 48)
INERTIA FUEL SHUT-OFF (IFS) SWITCH
SPEED CONTROL SERVO/AMPLIFIER ASSEMBLY
ANTI-LOCK BRAKES SYSTEM (VEHICLE SPEED SIGNAL)
RABS
4WABS
FUEL PUMP/ FUEL GAUGE SENDER
SUPPLEMENTAL RESTRAINTS SYSTEM (AIR BAG DIAGNOSTIC MONITOR)
GENERATOR/ VOLTAGE REGULATOR
ANTI-LOCK BRAKES SYSTEM
3.0L/4.0L ONLY
WARNING SYSTEMS
ENGINE COOLANT TEMPERATURE SENDER
ANTI-LOCK BRAKES SYSTEM
S216 (RABS ONLY)
DAYTIME RUNNING LAMPS (DRL) MODULE
W/ DRL
W/O DRL
PARK BRAKE SWITCH
GENERIC ELECTRONIC MODULE (GEM)/ CENTRAL TIMER MODULE (CTM)
HI
LO
VSS OUT
ENGINE OIL PRESSURE SWITCH
RABS DIODE
BRAKE FLUID LEVEL SWITCH
ANTI-LOCK BRAKES SYSTEM (RABS MODULE PIN 2)
CHARGE INDI-CATOR
AIR BAG INDI-CATOR
RIGHT TURN INDICATOR
HIGH BEAM INDI-CATOR
THEFT INDI-CATOR
LEFT TURN INDICATOR
INSTRUMENT CLUSTER ILLUMINATION
IGNITION SWITCH
ACC
START
LOCK
RUN
OFF
G104
102200