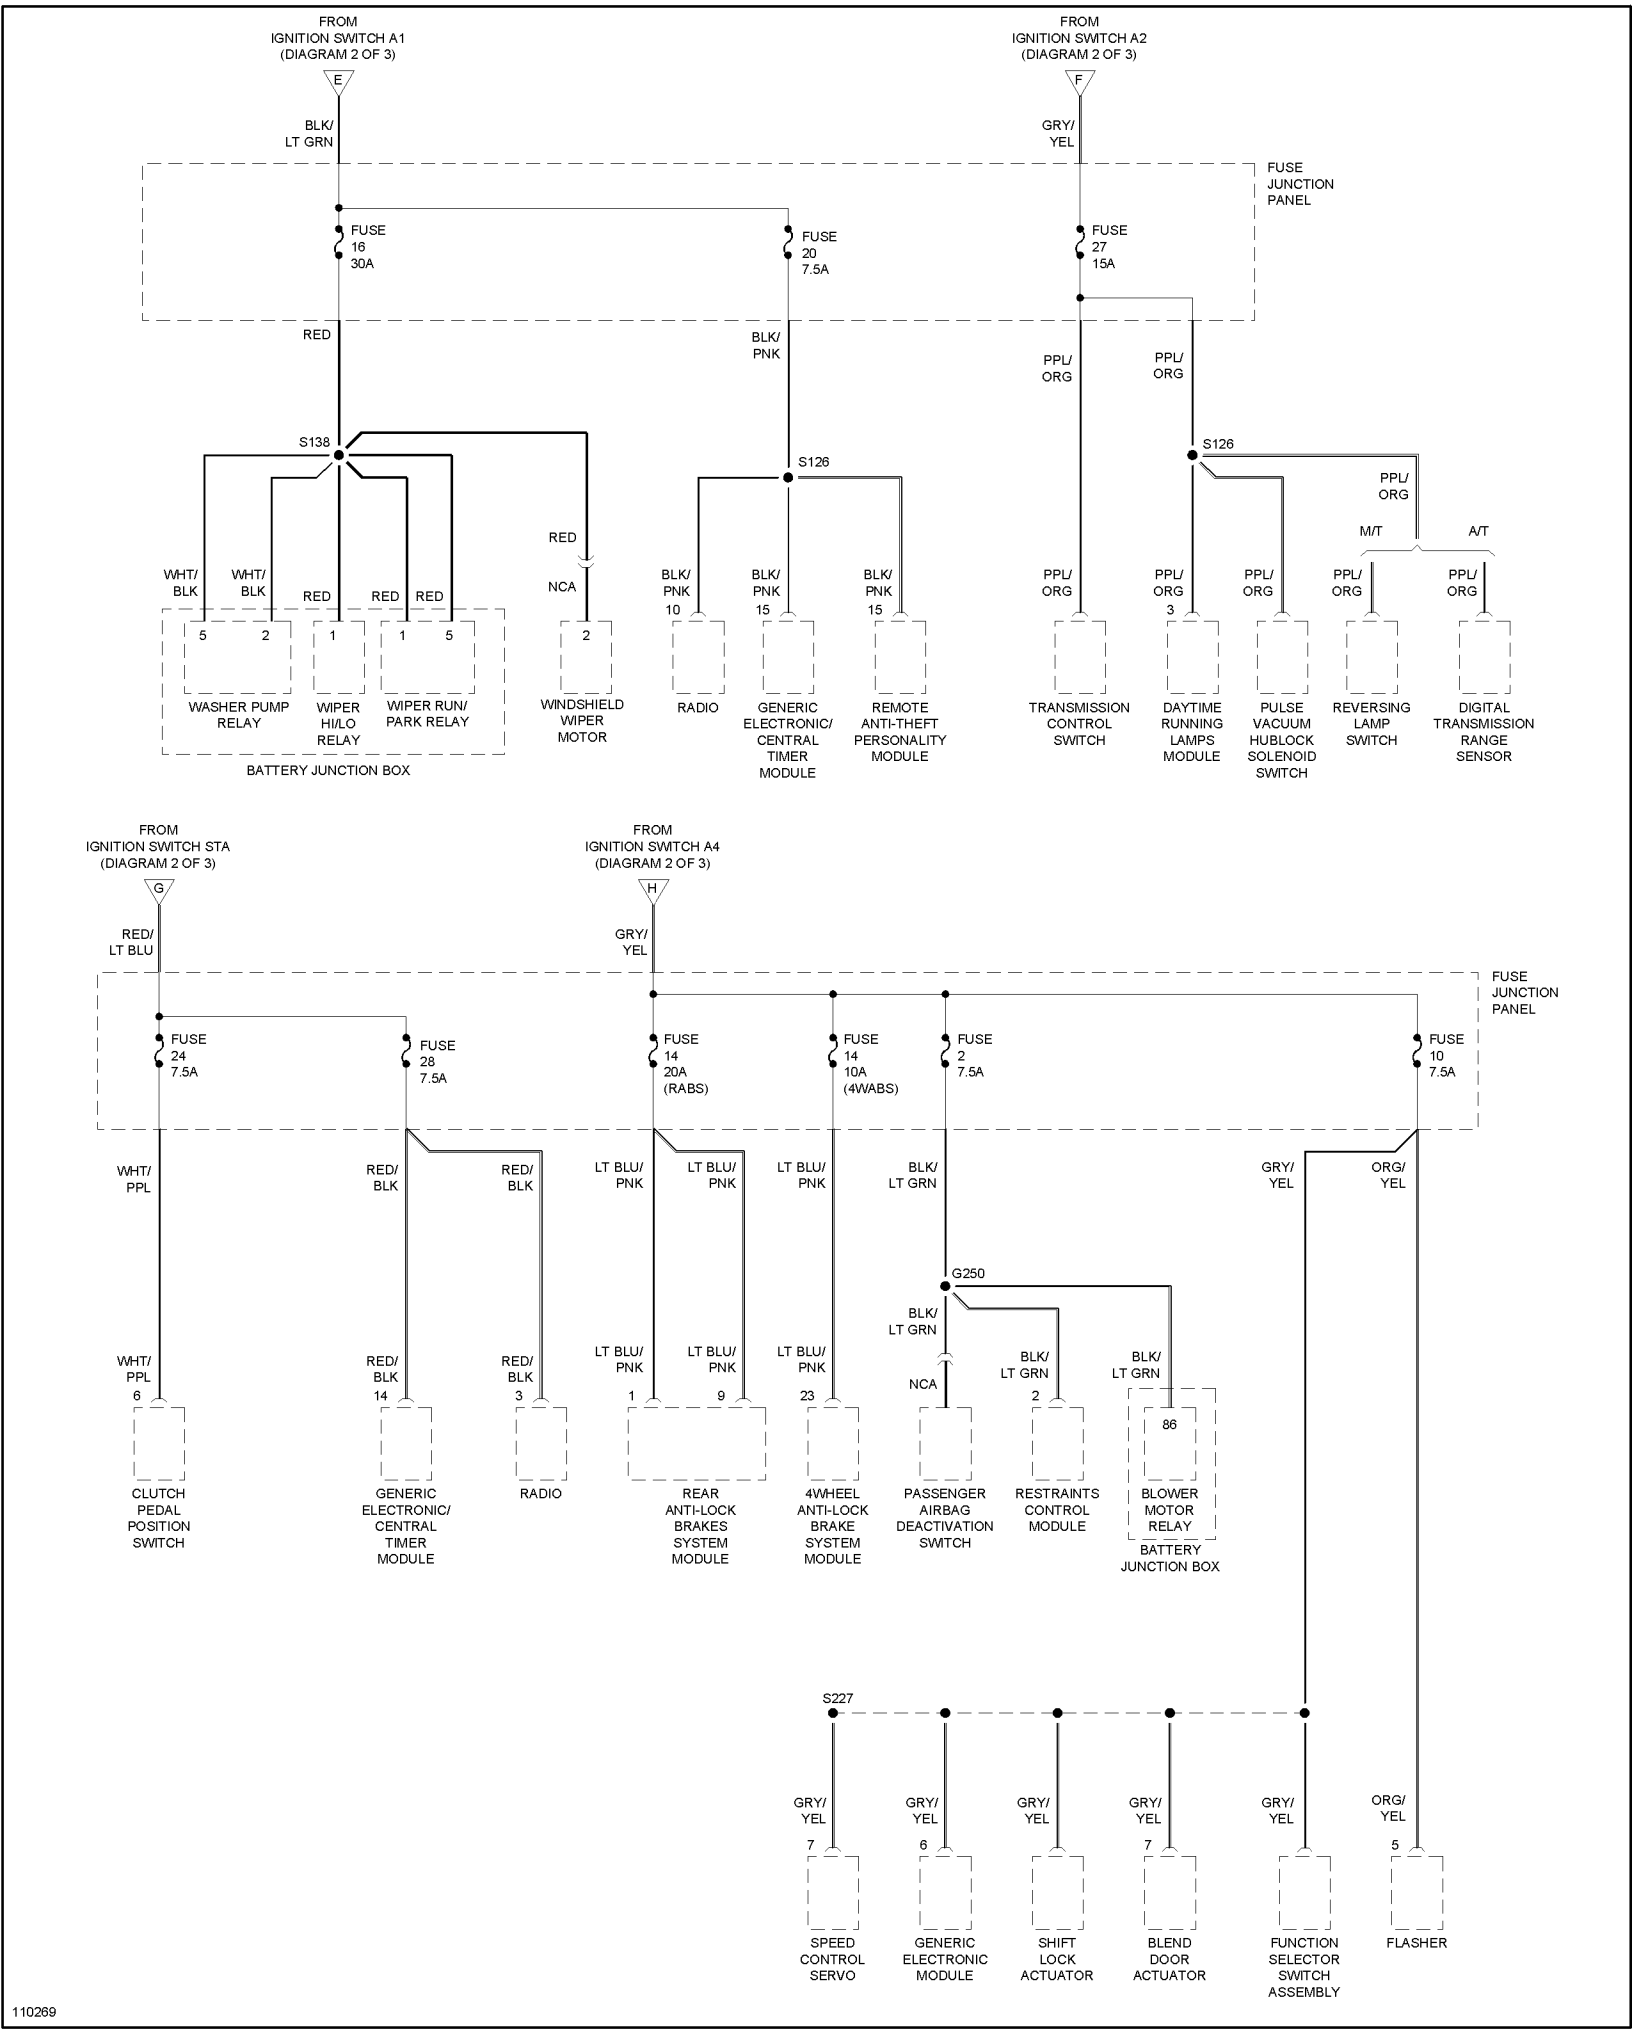
FROM IGNITION SWITCH A1 (DIAGRAM 2 OF 3)
E
BLK/ LT GRN
FROM IGNITION SWITCH A2 (DIAGRAM 2 OF 3)
F
GRY/ YEL
FUSE JUNCTION PANEL
FUSE 16 30A
FUSE 20 7.5A
FUSE 27 15A
RED
BLK/ PNK
PPL/ ORG
PPL/ ORG
S138
S126
S126
PPL/ ORG
M/T
A/T
RED
NCA
WHT/ BLK
WHT/ BLK
RED
RED
RED
BLK/ PNK 10
BLK/ PNK 15
BLK/ PNK 15
PPL/ ORG
PPL/ ORG 3
PPL/ ORG
PPL/ ORG
PPL/ ORG
5
2
1
1
5
2
WASHER PUMP RELAY
WIPER HI/LO RELAY
WIPER RUN/ PARK RELAY
BATTERY JUNCTION BOX
WINDSHIELD WIPER MOTOR
RADIO
GENERIC ELECTRONIC/ CENTRAL TIMER MODULE
REMOTE ANTI-THEFT PERSONALITY MODULE
TRANSMISSION CONTROL SWITCH
DAYTIME RUNNING LAMPS MODULE
PULSE VACUUM HUBLOCK SOLENOID SWITCH
REVERSING LAMP SWITCH
DIGITAL TRANSMISSION RANGE SENSOR
FROM IGNITION SWITCH STA (DIAGRAM 2 OF 3)
G
RED/ LT BLU
FROM IGNITION SWITCH A4 (DIAGRAM 2 OF 3)
H
GRY/ YEL
FUSE JUNCTION PANEL
FUSE 24 7.5A
FUSE 28 7.5A
FUSE 14 20A (RABS)
FUSE 14 10A (4WABS)
FUSE 2 7.5A
FUSE 10 7.5A
WHT/ PPL
RED/ BLK
RED/ BLK
LT BLU/ PNK
LT BLU/ PNK
LT BLU/ PNK
BLK/ LT GRN
GRY/ YEL
ORG/ YEL
G250
BLK/ LT GRN
NCA
BLK/ LT GRN 2
BLK/ LT GRN
WHT/ PPL 6
RED/ BLK 14
RED/ BLK 3
LT BLU/ PNK 1
LT BLU/ PNK 9
LT BLU/ PNK 23
86
CLUTCH PEDAL POSITION SWITCH
GENERIC ELECTRONIC/ CENTRAL TIMER MODULE
RADIO
REAR ANTI-LOCK BRAKES SYSTEM MODULE
4WHEEL ANTI-LOCK BRAKE SYSTEM MODULE
PASSENGER AIRBAG DEACTIVATION SWITCH
RESTRAINTS CONTROL MODULE
BLOWER MOTOR RELAY
BATTERY JUNCTION BOX
S227
GRY/ YEL 7
GRY/ YEL 6
GRY/ YEL
GRY/ YEL 7
GRY/ YEL
ORG/ YEL 5
SPEED CONTROL SERVO
GENERIC ELECTRONIC MODULE
SHIFT LOCK ACTUATOR
BLEND DOOR ACTUATOR
FUNCTION SELECTOR SWITCH ASSEMBLY
FLASHER

110269